



Front View Camera Installation – Toyota CHR 2016 - 2019

Front View Camera Module,

Module Name: Basic10012

Module Version: 1.6

Harness: 7050



Camera: Basic50030





Location of front camera:



Harness Installation,
First, remove the center display (infotainment system)

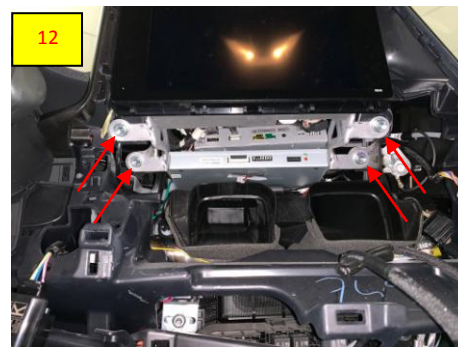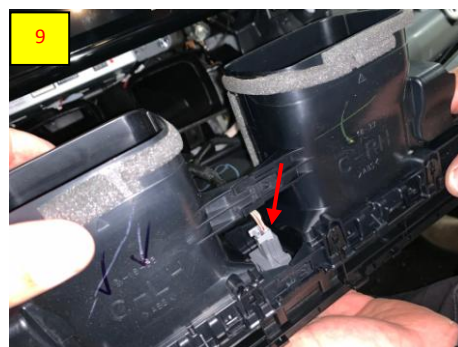

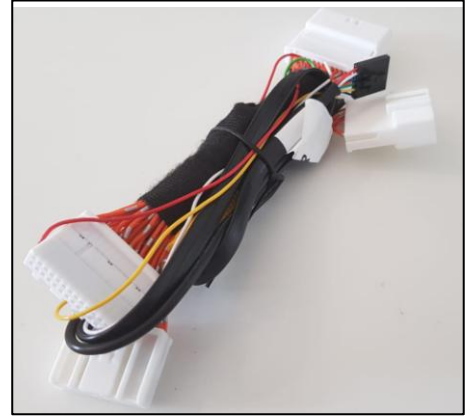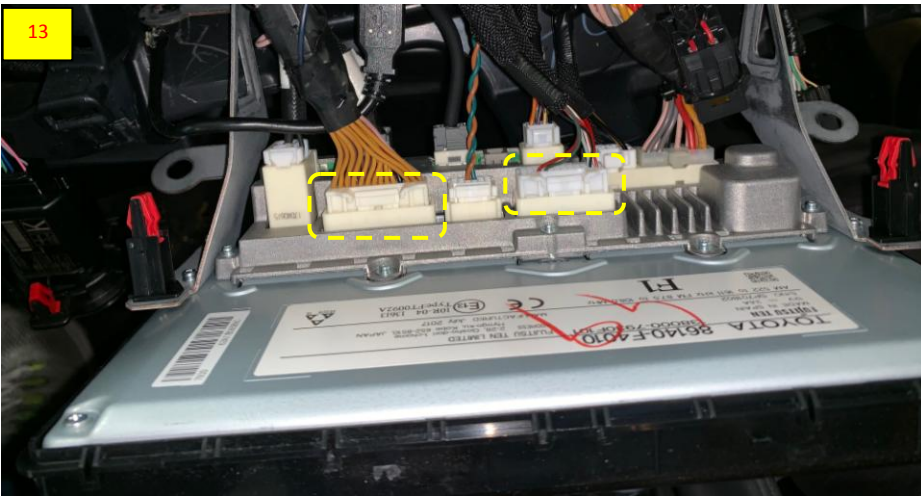


Remove white connectors and, Install the plug & play connector (supplied).

- White color wire – connect to the power (red color wire) of front camera
- Yellow color wire – connect to green color wire, belongs to windows closer.

Windows closer,

Connect the yellow color wire from "Basic Module" to the green color wire .

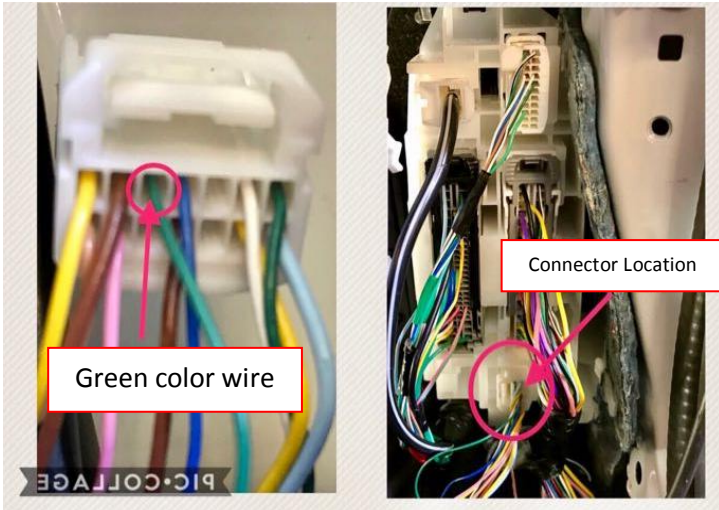

Location of connector belongs to windows closer